

PalletPal Mechanical Level Loaders

The unit lowers too easily and too early, why?

- The springs may be too weak - Check the spring ratings.

The unit lowers too hard and too late, why?

- The springs may be too strong - Check the spring ratings.

Why does the top of the unit rotate away from me?

- The frame of the unit may not be level. Move the unit to a level surface or install the optional adjusting feet to level base frame.

Why does the top of the unit bounce?

- The shock absorber may be damaged. Check for leaks or dents. Replace if necessary.

Why is there excessive "rumble" when the rotating ring is turning?

- Excessive wear or lack of lubrication to bearings under the turntable. Remove the turntable and replace the bearings.

Why is there wear on the underside of the turntable?

- This is a normal condition caused by work-hardening of metal. No repair is necessary.